

Updating the Precious Metal Verifier Metal Selection Choices


From time to time we may have additions to the Precious Metal Verifier metal selection menu. You can update your equipment by just using a personal computer. You will need access to a Windows based computer or another computer with a Windows emulator.

Do not update your Precious Metal Verifier if your firmware version is 1.12 or higher. You already have the latest database.


You will need a computer with internet access, the Precious Metal Verifier, and the cord that connects the Verifier to your computer (it came with your power adapter). There are three things that need to be done; download the Metal Update Program, download the Metal Data, and run the program to update the Precious Metal Verifier.

Download the Metal Update Program

1. Go to our website www.sigmametalytics.com; use the Internet Explorer browser to update the Precious Metal Verifier.
2. Select the 'Details' tab on the upper menu bar
3. Below the heading, **Latest Software Updates**, are three buttons. The first contains these instructions, the second contains the program needed to update the Precious Metal Verifier (PMV), and the third contains the data used to update the PMV.
4. Click on the button that says 'Metal Update Program'.
5. In the dialogue box that appears select 'Open'.
6. Double-click on 'setup Database Downloader'.
7. You may need to temporarily disable your antivirus program to get this to work. Windows will display the following window:

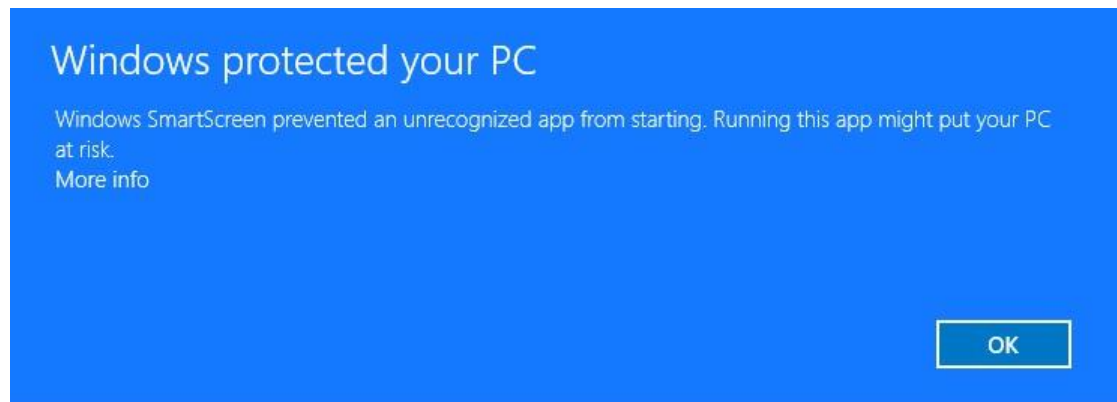

Click on the words 'More info' to get this window

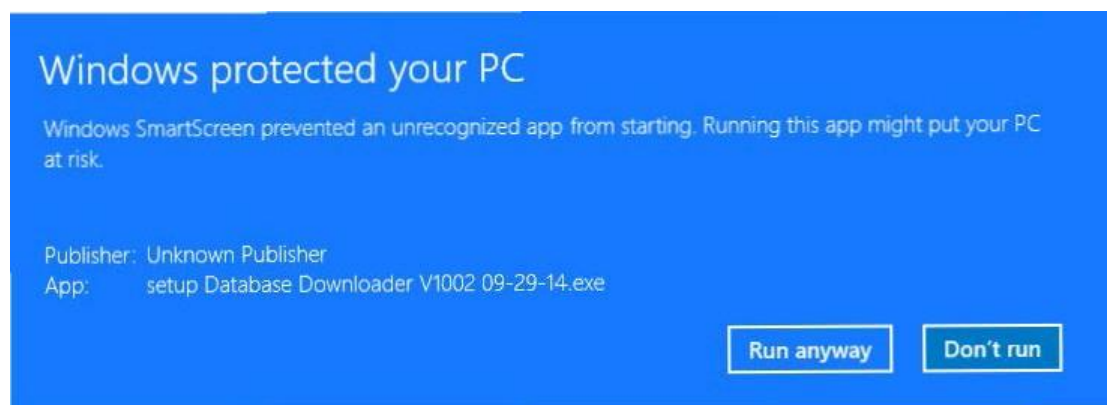

and then click on 'Run anyway'.

8. Follow the setup wizard to complete loading the program. For quickest installation click on next, next, next, Install, Yes, Finish.
9. Close the open window, you have successfully installed the Downloader application and should see the Database Downloader icon on your desktop.

Download the Metal Update data

1. Go to our website www.sigmametalytics.com; we recommend using the Internet Explorer browser to update the Precious Metal Verifier.
2. Select the 'Details' tab on the upper menu bar

3. Below the heading, **Latest Software Updates**, are three buttons. The first contains these instructions, the second contains the program needed to update the Precious Metal Verifier (PMV), and the third contains the data used to update the PMV.
4. Click on the right-most button that reads 'Metal Data Oct-2015'.
5. In the dialogue box that appears select 'Open'.
6. On the menu line, click on 'Extract'.
7. Then click on 'Extract All'
8. For the file location type or cut & paste -
C:\Sigma Metalytics\Database Files
9. Click on 'Extract'.
10. Close the window, you are now ready to update the Precious Metal Verifier.

Run the Metal Update Program

1. Connect your Precious Metal Verifier to a USB port on your computer using the adapter cable that came with your unit.
2. Turn on the Precious Metal Verifier.
3. Go to your desktop and open the 'Database Downloader' icon.
4. Click on 'Program'
5. Click on 'Open'.
6. Double-click on 'PMV Metal data Sep-2015'.
7. Wait until you get a message saying, "Database downloaded successfully."
8. Again click on 'Open' and then double-click on PMV Bullion data Oct-15.
9. Wait again until you get a message saying, "Database downloaded successfully."
10. Close the open window.
11. Your Precious Metal Verifier is now up to date.